

【Compatibility Chart】

○ : Compatible X : Not Compatible

PZ42X

【PZ42X】CA for CANON (v7)		Shutter Speed Control	Flash Ready in Finder *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	Auto Power Zoom	Auto Effective Range Indication	
Digital	JAPAN	EU/USA									
	EOS KISS DIGITAL F	EOS1000D	○	○	○	E-TTL II	○	X	○	○	
	EOS KISS DIGITAL X2	EOS450D	○	○	○	E-TTL II	○	X	○	○	
	EOS KISS DIGITAL X	EOS400D	○	○	○	E-TTL II	○	X	○	○	
	EOS KISS DIGITAL X3	EOS500D	○	○	○	E-TTL II	○	X	○	○	
	EOS 5D/ 20D / 30D/40D			○	○	○	E-TTL II	○	X	○	○
	EOS 40D/ EOS 50D (Version 7)			○	○	○	E-TTL II	○	X	○	○
	EOS KISS DIGITAL N	EOS 350D/DIGITAL REBEL XT	○	○	○	E-TTL II	○	X	○	○	
	EOS 1D mark II / EOS 1Ds mark II/ EOS 5D Mark II			○	○	○	E-TTL II	○	X	○	○
	EOS 1D Mark III			○	○	○	E-TTL II	○	X	○	○
	EOS KISS DIGITAL	EOS 300D/DIGITAL REBEL	○	○	○	E-TTL	○	X	○	○	
	EOS 60D			○	○	○	E-TTL	○	X	○	○

【PZ42X】NE for NIKON (v5)		Shutter Speed Control	Flash Ready in Finder *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	Auto Power Zoom	Auto Effective Range Indication	
Digital	JAPAN	EU/USA									
	D5000/D300S/D3000/D90/D700/D40X/D60			○	○	○	i-TTL	○	○	○	○
	D40			○	○	○	i-TTL	○	○	○	○
	D80			○	○	○	i-TTL	○	○	○	○
	D3/D300/D200/D50/D70s/D70			○	○	○	i-TTL	○*4	○	○	○
	D2X/D2Xs/D2Hs/D2H/D3			○	○	○	i-TTL	○*4	○	○	○
	D100										
	D1X/D1H/D1										
	Fujifilm Finepix S3 Pro										
	Fujifilm Finepix S5 Pro			○	○	○	-	○	○	○	○

【PZ42X】SO for SONY (v6)		Shutter Speed Control	Flash Ready in Finder *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	Auto Power Zoom	Auto Effective Range Indication
Digital	JAPAN	EU/USA								
	Sony α100/ α 200/ α 300/ α 350/ α 700/ α 900			○	○	○	ADI/TTL	○	○	○
	α7 Digital			○	○	○	ADI	○	○	○

PZ40X

【PZ40X】CA-eII for CANON (v6)		Shutter Speed Control	Flash Ready in Finder *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	Auto Power Zoom	Auto Effective Range Indication	
Digital	JAPAN	EU/USA									
	EOS KISS DIGITAL F	EOS1000D	○	○	○	E-TTL II	○	X	○	○	
	EOS KISS DIGITAL X2	EOS450D	○	○	○	E-TTL II	○	X	○	○	
	EOS KISS DIGITAL X	EOS400D	○	○	○	E-TTL II	○	X	○	○	
	EOS KISS DIGITAL X3	EOS500D	○	○	○	E-TTL II	○	X	○	○	
	EOS 5D/ 20D / 30D /40D/50D			○	○	○	E-TTL II	○	X	○	○
	EOS 1D Mark III /EOS 1D mark II N			○	○	○	E-TTL II	○	X	○	○
	EOS KISS DIGITAL N	EOS 350D/DIGITAL REBEL XT	○	○	○	E-TTL II	○	X	○	○	
	EOS 5D Mark II/ EOS 1Ds mark II			○	○	○	E-TTL II	○	X	○	○
	EOS 1D mark II / EOS 1Ds mark II			○	○	○	E-TTL II	○	X	○	○
	EOS KISS DIGITAL	EOS 300D/DIGITAL REBEL	○	○	○	E-TTL	○	X	○	○	
	EOS 10D / EOS 60D			○	○	○	E-TTL	○	X	○	○
	PowerShot ProI										
	PowerShot G2,G3,G5,G6,G7,G9,G10, S5 IS *Note 1										

* Note 1 : to set "Auto mode" on camera side, but not to set "Manual mode"

【PZ40X】NE-i (New) for NIKON (v6)		Shutter Speed Control	Flash Ready in Finder *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	Auto Power Zoom	Auto Effective Range Indication	
Digital	JAPAN	EU/USA									
	D5000/D300S/D3000/D90/D700/D40X /D60			○	○	○	i-TTL	○	○	○	○
	D40			○	○	○	i-TTL	○	○	○	○
	D80			○	○	○	i-TTL	○	○	○	○
	D3/D300/D200/D50/D70s/D70			○	○	○	i-TTL	○*4	○	○	○
	D2X/D2Xs/D2Hs/D2H/D3			○	○	○	i-TTL	○*4	○	○	○
	D100										
	Fujifilm Finepix S3 Pro										
	Fujifilm Finepix S5 Pro			○	○	○	-	○	○	○	○
	D1X/D1H/D1										
	F6/F5/F100 (compatible with PZ40X NE)										

【PZ40X】SO for SONY (v6)		Shutter Speed Control	Flash Ready in Finder *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	Auto Power Zoom	Auto Effective Range Indication
Digital	JAPAN	EU/USA								
	Sony α100/ α 200/ α 300/ α 350/ α 700/ α 900			○	○	○	ADI/TTL	○	○	○
	α7 Digital			○	○	○	ADI	○	○	○

PF30X

【PF30X】CA for CANON (v6)		Shutter Speed Control	Flash Ready *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	
Digital	JAPAN	EU/USA							
	EOS KISS DIGITAL F	EOS1000D	○	○	○	E-TTL II	○	X	
	EOS KISS DIGITAL X2	EOS450D	○	○	○	E-TTL II	○	X	
	EOS KISS DIGITAL X	EOS400D	○	○	○	E-TTL II	○	X	
	EOS KISS DIGITAL X3	EOS500D	○	○	○	E-TTL II	○	X	
	EOS 5D/ 30D/40D/50D			○	○	○	E-TTL II	○	X
	EOS 1D mark II N/ EOS 5D Mark II			○	○	○	E-TTL II	○	X
	EOS KISS DIGITAL N	EOS 350D/DIGITAL REBEL XT	○	○	○	E-TTL II	○	X	
	EOS 1Ds mark II			○	○	○	E-TTL II	○	X
	EOS 20D			○	○	○	E-TTL II	○	X
	EOS 1D mark II			○	○	○	E-TTL II	○	X
	EOS 1D Mark III			○	○	○	E-TTL II	○	X
	PowerShot G2,G3,G5,G6,G7,G9,G10, S5 IS *Note 1								
	EOS KISS DIGITAL	EOS 300D/DIGITAL REBEL							

* Note 1 : to set "Auto mode" on camera side, but not to set "Manual mode"

【PF30X】NE for NIKON (v4)		Shutter Speed Control	Flash Ready *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3	
Digital	JAPAN	EU/USA							
	D5000/D300S/D3000/D90/D700/D40X/D60			○	○	○	i-TTL	○	○
	D40			○	○	○	i-TTL	○	○
	D80			○	○	○	i-TTL	○	○
	D3/D300/D200/D50/D70s/D70			○	○	○	i-TTL	○*4	○
	D2H/D2X/D2Xs/D2Hs/D3			○	○	○	i-TTL	○*4	○
	D100								
	D1X/D1H/D1								
	COOLPIX 8800, 8700, 8400, 5700, 5400, 5100, 5000,								
	Fujifilm Finepix S3 Pro								
	Fujifilm Finepix S5 Pro			○	○	○	-	○	○

【PF30X】SO for SONY (v1)		Shutter Speed Control	Flash Ready *1	Auto Exposure Check *2	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light *3
Digital	JAPAN	EU/USA						
	Sony α100/ α 200/ α 300/ α 350/ α 700/ α 900			○	○	○	ADI/TTL	○
	α7 Digital			○	○	○	ADI	○

*The above compatibility data is solely tested by us.

To indicate Flash Ready in camera's finder.
 To indicate flash only.
 Available on flash or camera depending on models.
 To adjust by the button of exposure compensation.

Explanation of mark
○ Compatible
X Not Compatible

【RD2000】CA for CANON (v2)		Shutter Speed Control	Flash Ready	Auto Exposure Check *1	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light
JAPAN	EU/USA							
EOS KISS DIGITAL F	EOS 1000D	○	○	○	E-TTL II	○	○	X
EOS KISS DIGITAL X2	EOS450D	○	○	○	E-TTL II	○	X	X
EOS KISS DIGITAL X	EOS400D	○	○	○	E-TTL II	○	○	X
EOS KISS DIGITAL X3	EOS500D	○	○	○	E-TTL II	○	X	○
EOS 5D/ 30D/40D/50D		○	○	○	E-TTL II	○	○	X
EOS 1D mark II N		○	○	○	E-TTL II	○	○	X
EOS KISS DIGITAL N	EOS 350D/DIGITAL REBEL XT	○	○	○	E-TTL II	○	○	X
EOS 5D Mask II/EOS 1Ds mark II		○	○	○	E-TTL II	○	○	X
EOS 20D		○	○	○	E-TTL II	○	○	X
EOS 1D mark II		○	○	○	E-TTL II	○	○	X
EOS 1D Mark III		○	○	○	E-TTL II	○	○	X
PowerShot G2,G3,G5,G6, ProI		X	X	○	—	○	X	X
PowerShot G7,G9, G10, S5IS *Note 2		○	X	○	—	○	○	X
EOS KISS DIGITAL	EOS 300D/DIGITAL REBEL				- Not Compatible -			
EOS D60, 10D, 1D, 1Ds					- Not Compatible -			

* Note 1 : to indicate flash only.
 * Note 2 : Can be used TTL Mode only, but cannot be used "Manual Mode" on camera side.

【RD2000】NE for NIKON (v1)		Shutter Speed Control	Flash Ready	Auto Exposure Check *1	Flash Control	Flash Compensation	2nd Curtain Sync.	AF Assist Light
JAPAN	EU/USA							
D5000/D300S/D3000/D90/D700/D40X/D60		○	○	○	i-TTL	○	○	X
D40		○	○	○	i-TTL	○	○	X
D80		○	○	○	i-TTL	○	○	X
D3/D300/D200/D50/D70s/D70		○	○	○	i-TTL	○	○	X
D2H/D2X/D2XS/D2HS/D3		○	○	○	i-TTL	○	○	X
D100					- Not Compatible with D-TTL -			
D1X/D1H/D1					- Not Compatible with D-TTL -			
COOLPIX 8800, 8700,8400,5700,5400,5100,5000,					- Not Compatible -			
Fujifilm Finepix S3 Pro					- Not Compatible -			
Fujifilm Finepix S5 Pro		○	○	○	—	○	○	X

* Note 1 : to indicate flash only.

*The above compatibility data is solely tested by us.

To indicate Flash Ready in camera's finder.
 To indicate flash only.
 Available on flash or camera depending on models
 To adjust by the button of exposure compensation.

Explanation of mark
○ Compatible
X Not Compatible